User Manual Manual del usuario



BLUETOOTH® FABRIC SPEAKER

SPANISH TEXT



English.....Page 3 En español...Página 12

Contents

Safety	4
Technical Specifications	6
Product Overview	6
Pairing BT Speaker to mobile phone or another device	
Charge Battery	7
Power On/Off	7
Change the volume and song button	8
Hands - free functionality	
The Multi-Function button	8
Disposal	9
Maintainance and Storage.	9
Warranty Terms	10
Warranty Card	



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth Sig, Inc. and any use of such marks by BAUHN is under license. Other trademarks and trade names are those of their respective owners.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

AFTER SALES SUPPORT

4

Read this getting started guide carefully before operating this speaker and keep this manual for future reference.

- Keep the device away from heat, direct sunlight and sharp edges.
- Keep the device away from naked flames.
- Do not insert any metal object into the device. Risk of short circuit!
- To avoid a static charge, do not use the device in an extremely dry climate.
- Do not repair the unit yourself. Contact an authorised specialist.
- Only use the device in a moderate climate.
- Do not use any cleaning agent, as this may damage the casing. Clean the device with a clean, dry cloth.
- The charging port terminals are not to be short-circuited.
- Do not expose the speaker to water whilst charging. It may result in permanent damage to the speaker or power source.
- Dispose of the product according to local standards and regulations.
- Never use a charger that is damaged.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- **Caution:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Parts List

- 1 x Bluetooth Fabric Speaker
- 1 x Speaker Stand
- 1 x MicroUSB Charging Cable
- 1 x Wall Plug Adaptor
- 1 x User Manual

AFTER SALES SUPPORT

Solution 10 - 372 - 5715
 Solution 10 - 372
 Solution 10 - 372 - 5715
 Solution 10 - 3

Battery capacity:	3.7V, 800mAh, 2.96Wh
Output power:	5W
Transmission distance:	≤10 meters (32ft)
Charging method:	MicroUSB 5V
Input:	DC 5V 500mA
Charging time:	2.5 hours depending on input power
Operating time:	Approx. 3.5 hours @ 70% volume
IP rating:	IPX7*
Bluetooth version:	5.0
Impedance:	30hm
Well when a dantas	
Wall plug adaptor	
Model:	XY18U30-QC

XY18U30-QC 100-240V~ 50/60Hz 0.4A 5V --- 3A / 9V --- 2A / 12V --- 1.5A

*IPX7 means protection against the effects of immersion in water up to 3 feet for 30 minutes. The product is water-resistant only when the seal cover is well placed.

1. Lanyard

Input:


Output:

- 2. Multi-function button ► II
 - Play/pause/answer calls
- Minus button
 - Long press to change to the previous song
 - · Short press to decrease the volume
- 4. Plus button +
 - Long press to change to the next song
 - · Short press to increase the volume

- 5. Power button 🙂
 - Press for 3 seconds to power on/off

Product Overview

- 6. USB charging socket
- 7. Aux cable input
- 8. Indicator light
- 9. Microphone

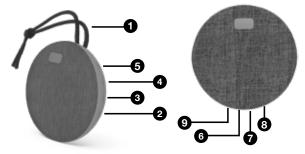

AFTER SALES SUPPORT (19) 800-372-5715

This Bluetooth speaker is powered by rechargeable lithium battery. Charge the battery as follows:

- 1. Pull out the seal to expose the DC 5V (MicroUSB port) and the AUX IN socket.
- Insert the MicroUSB end of the charging cable into the DC 5V socket on the unit. Connect the USB plug into a PC or Wall plug adaptor. The LED indicator turns red when the battery is being charged.
- 3. When the battery has fully charged, the red LED indicator will turn off.

Power On/Off

Power On: Long press on the **U** button on the speaker, the Bluetooth indicator light will turn on and you can connect to a Bluetooth device.

Power Off: Long press on the **U** button on the speaker, the Bluetooth indicator light will turn off.

Pairing

- 1. When you turn on your speaker the Bluetooth indicator light will start flashing. The speaker is now ready for pairing.
- Search for the speaker in your Bluetooth settings, on your device. The speaker is called HE190027.
- When successfully paired the LED light will turn solid blue and the speaker will chime to indicate the connection has been successful.

NOTE: Please make sure the speaker is off, prior to pairing.

When trying to activate the pairing mode

- 1. Turn on your mobile phone and activate the Bluetooth function.
- 2. Turn on the Bluetooth Speaker and ensure it is in pairing mode (the blue LED will flash).
- Search for Bluetooth devices and look for "HE190027" and pair with your device.

NOTE: The speaker will automatically connect to any previously paired devices, if you are trying to pair a new device, please ensure previously paired devices are either disconnected or are out of range.

Reconnecting to the speaker

Once this speaker has been paired to your device, next time when you switch on this speaker, it will automatically connect, if the Bluetooth setting for your device is switched on. This will only work if your device supports automatic reconnection.

Disconnecting from the speaker

Disconnect the Bluetooth connection from the speaker using the settings on your device.

AFTER SALES SUPPORT

🖀 🗐 800-372-5715

When listening to music

Play a song: Short press on the ►II button Pause a song: Short press on the ►II button Answer a call: Short press on the ►II button Reject a call: Long press on the ►II button Increase volume: Short press on the + button Decrease volume: Short press on the - button Next song: Long press on the - button

During a call

Increase volume: Long press on the + button Decrease volume: Long press on the − button End call: Short press on the ►II button

Hands-free functionality

1. With a device connected via Bluetooth, the speaker will play a ringtone when a call is coming through.

NOTE: This will be the speakers ringtone not the one programmed on your mobile device.

- Short press on ►II button to answer the call on the speaker. This will use the inbuilt microphone to operate the speaker as a Bluetooth communication system.
- 3. Short press on the II button to hang up the call when you are finished.
- 4. Long press on the ►II button on the speaker to reject the incoming call.
- When your call has ended, the speaker will automatically continue to play your music.

AFTER SALES SUPPORT

8

🕿 翊 800-372-5715 🛛 🗕 cus

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Maintainance and Storage

This speaker does not require scheduled cleaning. Should cleaning be necessary, simply wipe the outside surface with a dry soft cloth.

AFTER SALES SUPPORT

🕿 👒 800-372-5715

Dear Customer:

The ALDI warranty is a full warranty offering you the following benefits:

Warranty period:	 year from date of purchase. 6 months for movable parts and consumables under normal and proper conditions of use (e.g. rechargeable batteries). 	
Costs:	Free repair/exchange or refund. No transport costs.	
ADVICE:	Please contact our service hotline by phone, e-mail or fax before sending in the device. This allows us to provide support in the event of possible operator errors.	
In order to make a claim under the warranty, please send us:		

The faulty item with all component parts, the original receipt and the warranty card properly completed.

The warranty does not cover damage caused by:

Accident or unanticipated events (e.g. lightning, water, fire). Improper use or transport. Failure to follow the safety and maintenance instructions. Other improper treatment or modification of the product.

After the expiration of the warranty period, you may wish to have your product repaired at your own expense. You will be notified of the repair costs in advance.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state but this warranty is not intended to exceed statutory minimum requirements beyond what is included above.

This warranty does not limit the statutory obligation of the seller arising from any implied warranties. The period of warranty can only be extended in accordance with applicable law.

Neither the service company nor ALDI will assume any liability for data or settings stored on any returned product.

AFTER SALES SUPPORT

AFTER SALES SUPPORT

🖀 🚳 800-372-5715

Contenido

Seguridad	14
Descripción general del producto	
Especificaciones técnicas	
Características	
Lista de piezas	
Funcionamiento	
Solución de problemas	
Mantenimiento y eliminación	
Términos de la garantía	<u>2</u> 1
Tarjeta de garantía	.22



La palabra de marca Bluetooth® y sus logotipos son marcas registradas de Bluetooth Sig, Inc., y cualquier uso de dichas marcas por parte de BAUHN se hace bajo licencia. Otras marcas comerciales y nombres de marcas son propiedad de sus respectivos dueños.



WARRANTY CARD

TARJETA DE GARANTÍA

BLUETOOTH® FABRIC SPEAKER

SPANISH BLUETOOTH®

Your details / Sus datos:		
Name / Nombre		
Address / Dirección		
E mail / Corre	eo electrónico	
Date of purchase / Fecha de compra*		
*We recommend you keep the receipt with this warranty card /		
Le recomendamos que guarde el recibo con esta tarjeta de garantía		
Location of purchase / Lugar de la compra		
Description of malfunction / Descripción de la avería:		
Return your completed warranty card together with the faulty product to: / Devuelva su tarjeta de garantía completada junto con el producto defectuoso a:	AFTER SALES SUPPORT - SERVICIO POSVENTA AFTER SALES SUPPORT - SERVICIO POSVENTA Customercare@ balcolifestyle.com MODEL: HE190027 PRODUCT CODE: 701271 07/2020	
Balco Brands 7901 Baymeadows Way Suite #14 Jacksonville FL 32256 Balco Lifestyle Help Desk 800 327 5715 Operating Hours: Mon - Fri 09:00 to 18:00 CT email: customercare@balcolifestyle.com	YEAR WARRANTY	
www.balcolifestyle.com	AÑOS DE GARANTÍA	



DISTRIBUTED BY • DISTRIBUIDO POR:

ALDI INC., BATAVIA, IL 60510 www.aldi.us

